



Clear Call Service

Models: AOC24, AOC5241, MOC24, MOC5241, OC24, OC24BK, OC5241BK, OC5241HJ, OC524T1BK

If oven displays “CALL SERV” in the display do the following steps to clear “Call Service”.

1. Unplug oven plug from the electrical outlet for approximately 1 minute.
2. Plug oven plug back into electrical outlet.

Note: If Call Service does not clear contact service agent for repair.