


Clear Call Service

Models: RFS12TS, RFS18TS

If oven displays “CALL SERV” in the display do the following steps to clear “Call Service”.

1. Open oven door.
2. Press and hold number 3 keypad for approximately 5 seconds until display indicates “SERVICE”.
3. Press number 7 keypad to clear “Call Service”.
4. Press Stop / Reset  and close door to return to normal operation.